

Dear Customer,

This Quick Start Guide is enclosed with detailed dishwasher Operating Instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging your dishwasher into the mains power, remove the safety packaging. Do not start the dishwasher before it is properly set up.

1 Turn on the appliance

- Close the appliance door, press the on/off button to turn on the appliance.

2 Dispense detergent

- Press the latch to open the detergent dispenser.
- Add detergent to the dispenser.

3 Check the special salt level

- Add special salt to the dispenser when the corresponding indicator on the control panel comes on.

4 Load the dishes

- Remove food leftovers from the dishes
- Place the dishes in the baskets according to loading guidelines.
- It is recommended to load the lower basket first, then the upper basket.

5 Select the wash programme

- Select the desired programme and its indicator will light up. Press Start/Pause, and the dishwasher programme will resume

6 Start your dishwasher

- Close the dishwasher door.
- The dishwasher will start a wash programme.

7 Turn off the appliance



- Press Start / Pause to turn off the appliance

8 Remove dishes from the appliance

- When the dishwasher is off, open the door and wait about 15 minutes before removing the dishes. This will also facilitate the drying process. Hot dishes are more susceptible to cracking.





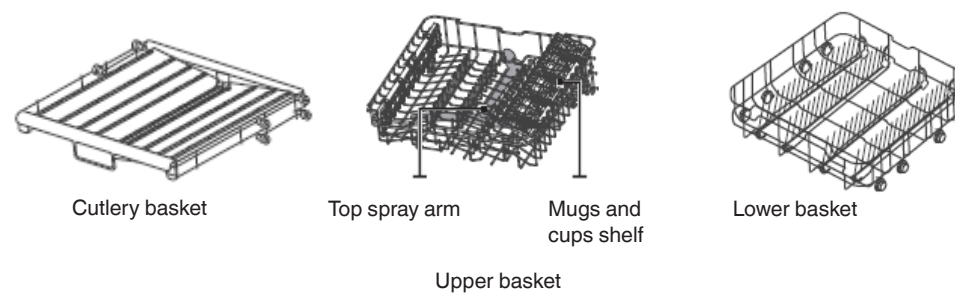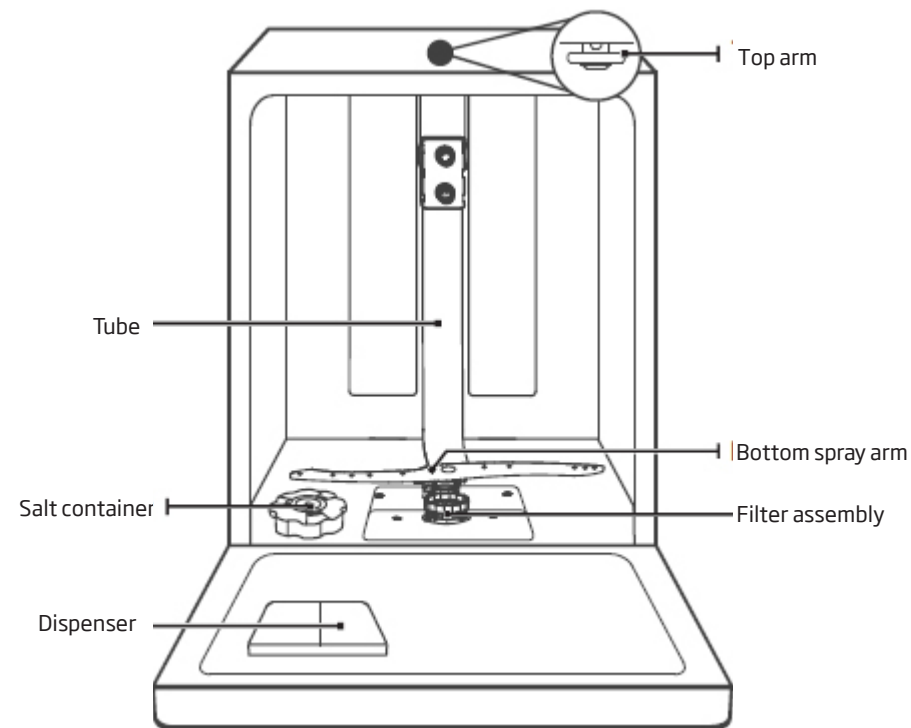




9 Features and components

- Spray arms
- Cutlery basket
- Upper basket
- Inner tube
- Lower basket
- Salt container
- Detergent dispenser
- Mugs and cups shelves
- Main filter
- Water supply hose connection
- Water drain hose
- Regulator



NOTE: Figures are for illustrative purposes only Individual models may vary.

TABLE OF WASH PROGRAMMES: 3LVF-635 / 3LVF-635X

ITEM	Programme name	Default temperature [°C]	Type of soil	Soil level	Amount of detergent	Type of cycle						Duration (min.)*	Power consumption (kWh)*	Water consumption (l)*
						Pre-wash	Wash	Rinse	Rinse	Rinse	Dry			
1	Auto 	45-55°	Automatic programme selection for any type of soil, including residual dried food on the dishes.	Varying soil	5g/30g (1 or 2 pieces)	Pre-wash 45°C	Automatic wash 45-55°C	Rinse	Rinse 65°C	Dry		150	0.9-1.3	11~ 15
2	Hygiene 	70°	With the Sanitize option selected, the water temperature is increased to 70 °C for high temperature sanitization.	Heavy soil	35g (1 or 2 pieces)	Pre-wash 50°C	Wash 0°C	Rinse	Rinse	Rinse 70°C	Dry	175	1.8	17.5
3	**ECO ECO 	45°	Lightly soiled glass-ware and porcelain.	Light soil	5g/30g (1 or 2 pieces)	Pre-wash	Wash 45°C	Rinse 60°C	Dry			225	0.93	10
4	Glass 	40°	For lightly soiled crockery and glass.	Light soil	5g/30g (1 piece)	Pre-wash	Wash 40°C	Rinse	Rinse 60°C	Dry		130	0.9	13
5	90' 	65°	For normally soiled loads that need quick wash.	Light soil	35g (1 piece)	Wash 65°C	Rinse	Rinse 65°C	Dry			90	1.35	12.5
6	60' 	60°	Lightly soiled dishes that do not require full drying.	Light soil	5g/30g	Pre-wash 50°C	Wash 60°C	Rinse 60°C	Dry			60	1.15	10
7	Party 	35°	Quick programme for lightly soiled dishes, which do not require drying.	Light soil		Wash 35°C	Rinse 35°C					20	0.45	11
8	Soak 	35°	To rinse dishes that you plan to wash later that day			Pre-wash						15	0.02	4
9	Auto-clean 	70°	Auto-clean programme.	Light soil	35g (1 piece)	Wash 70°C	Rinse 60°C	Rinse 70°C	Dry			100	1.2	11

** Standard programme This is a reference program for research institutes. Tests according to EN 50242. This programme is suitable for washing normally soiled tableware. This is the most effective programme taking into account the total energy and water consumption for this kind of tableware.

* Programme duration, energy and water consumption value given in the table have been determined under laboratory conditions. Actual values can vary.